


Make & Model

DODGE RAM 1500 09-16

Parts A - Flares & Rubber Strip

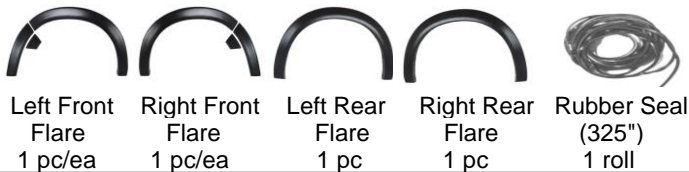


Caution: Always check the package, ensure the fitment of fender flare and follow the instruction carefully. PSI will not be responsible for painting & orther cost incurred to incorrect fender flares, failure of installation, shipping damage or modified flares.

1. Pre-Installation



1. Prefit and ensure both left (driver) side & right (passenger) side fender flare to the vehicle before painting or installation.
2. You may remove any moldings, strips or existing flares from the vehicle for fitting and installation.

3. Clean Vehicle Body & Fender Flare

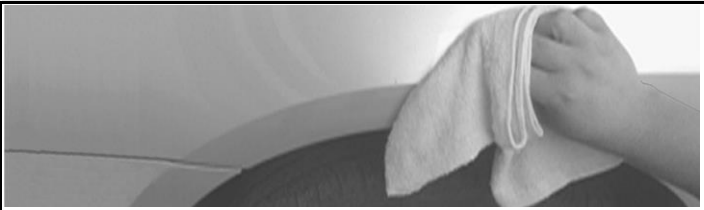

1. Wash and wipe dry the areas of contact on the vehicle body.
2. Clean the surface and inside edge of the fender flare where the rubber seal is to be attached.

INSTALLATION INSTRUCTION


Item No. 800-0204

OEM Style

Parts B - Parts for Installation




2. Paint Flare(Optional)

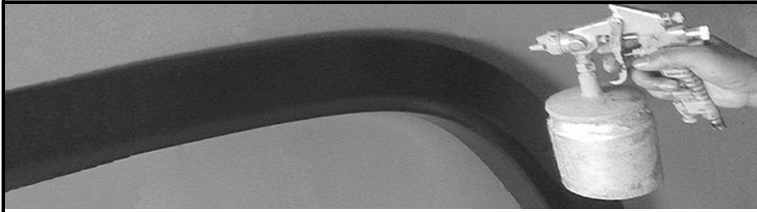

1. Hire a professional painter or body shop and follow the paint manufacturer specifications to paint the flares.
2. Clean all fender flare surface with clean water & a mild detergent before paint, don't use lacquer thinner or any solvent based product


4. Apply Rubber Seal

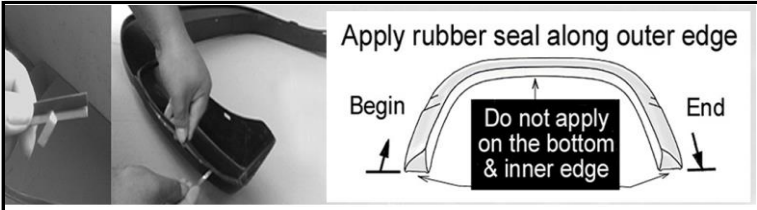

1. Remove 1 inch tape liner from rubber seal, apply it on the flare, start one end & along the edge that comes in contact with body panel. **Caution: 3M tape will stick on the inside of the flare.**
2. Make sure the rubber seal along the edge well, and rip the tape liner off gradually, apply pressure on the tape in the same time to ensure that it adheres well. Trim excess rubber seal and so on.

Install Front Flare with Metal Bumper

5. Installation (Left Front Flare Shown)

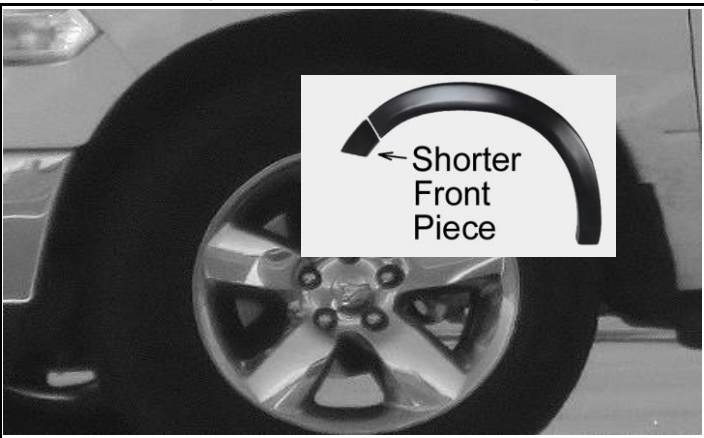


1. Use shorter front bumper piece for metal bumper vehicle.

6. Installation (Left Front Flare Shown)




1. Connect the large front flare and shorter front piece from inside of the flare with one truss machine screw & nut.

7. Installation (Left Front Flare Shown)

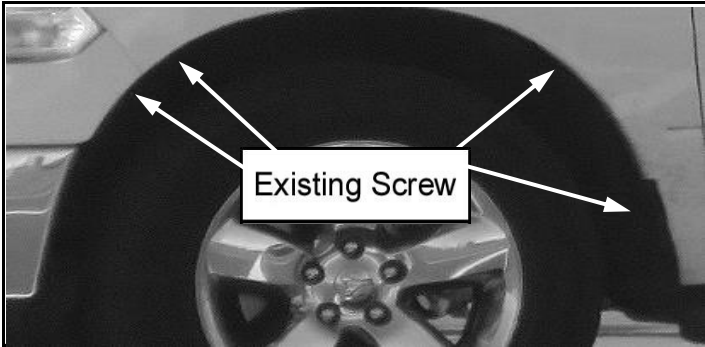


1. Remove four existing factory screws with 8mm socket.

9. Installation (Left Front Flare Shown)

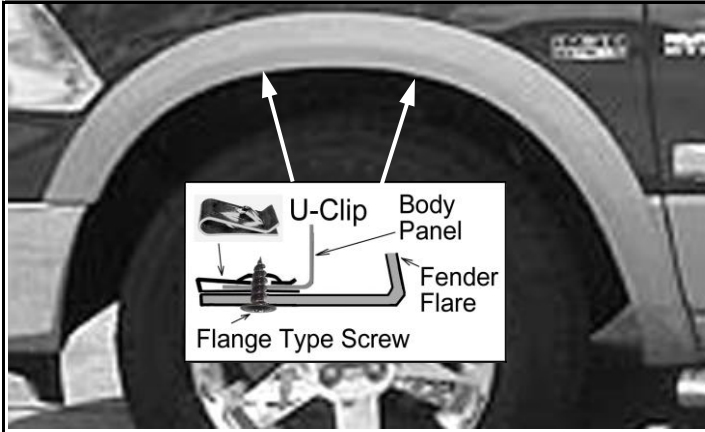


1. Apply 2 U-Clip and align two top factory holes.
2. Hold the flare in position on the vehicle, align with holes in flare. Adjust the clips in position if needed, secure 2 flange screws into the U-clip.

8. Installation (Left Front Flare Shown)

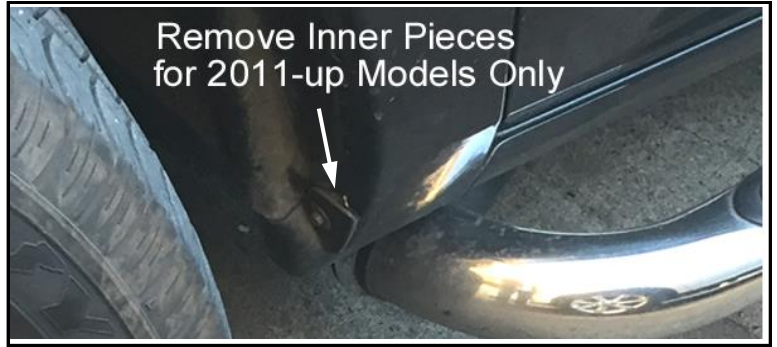

1. For 2011-up models, you may need remove the inner pieces at front rear end of wheel well, as shown.

10. Installation (Left Front Flare Shown)

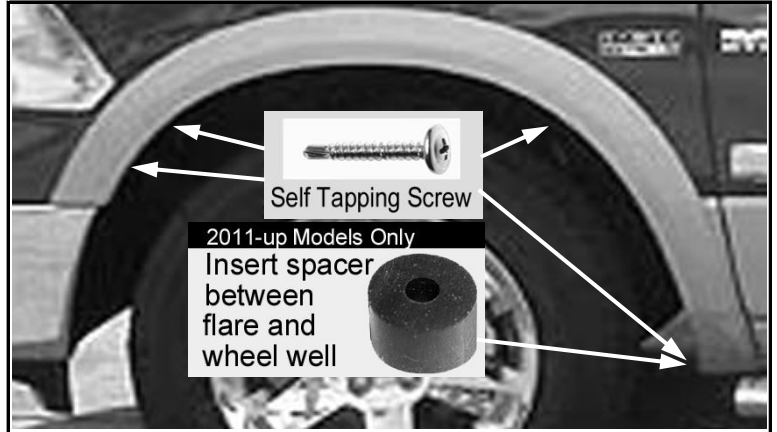

1. Install 4 supplied self tapping screws through flare into factory hole.
2. **For 2011-up models**, insert the spacer into the rearmost lower factory hole before apply the self tapping screw, as shown.
3. Press flare firmly and tighten all screws.

Install Front Flare with Plastic Bumper

11. Installation (Left Front Flare Shown)



1. Use the longer front piece flare for large plastic bumper.

13. Installation (Left Front Flare Shown)



1. Remove 2 existing factory fasteners from the vehicle.

12. Installation (Left Front Flare Shown)




1. Connect the large front flare and longer front piece from inside of the flare with one truss machine screw & nut.

14. Installation (Left Front Flare Shown)




1. For 2011-up models, you may need remove the inner pieces at front rear end of wheel well, as shown.

15. Installation (Left Front Flare Shown)

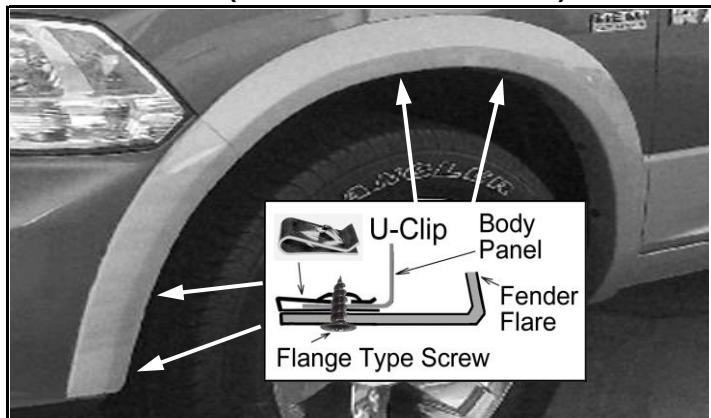

1. Apply 4 U-Clip, align two top factory holes & two on bumper.
2. Hold the flare in position on the vehicle, align with holes in flare. Adjust the clips in position if needed, secure 4 flange screws into the U-clip.


16. Installation (Left Front Flare Shown)

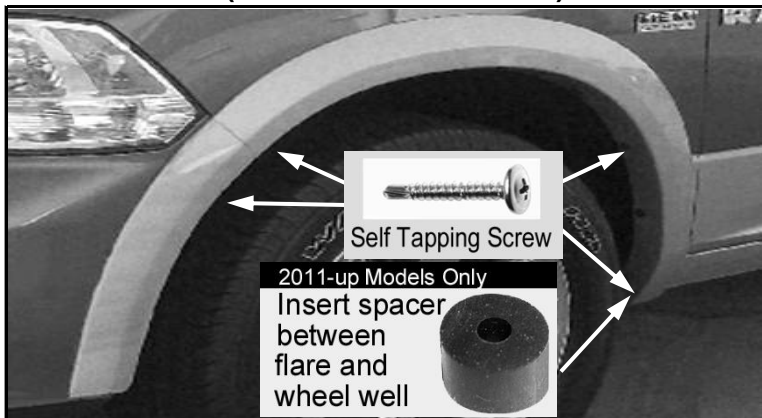

1. Install 4 supplied self tapping screws through flare into factory hole.
2. **For 2011-up models**, insert the spacer into the rearmost lower factory hole before apply the self tapping screw, as shown.
3. Press flare firmly and tighten all screws.


Install Rear Flare

17. Installation (Left Rear Flare Shown)

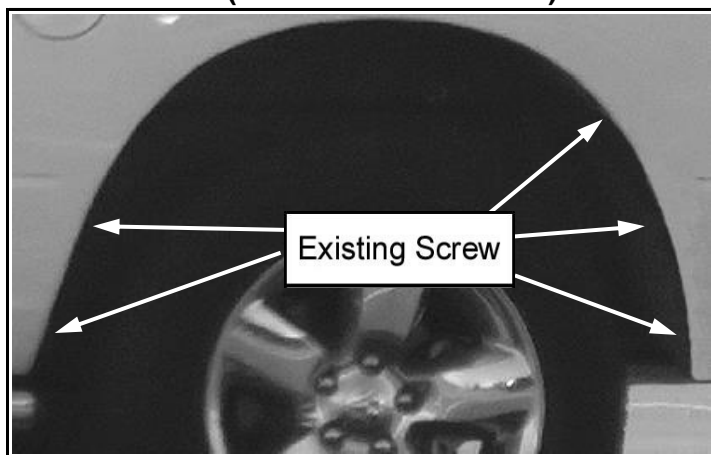


1. Remove five existing factory screws with 8mm socket.

18. Installation (Left Rear Flare Shown)

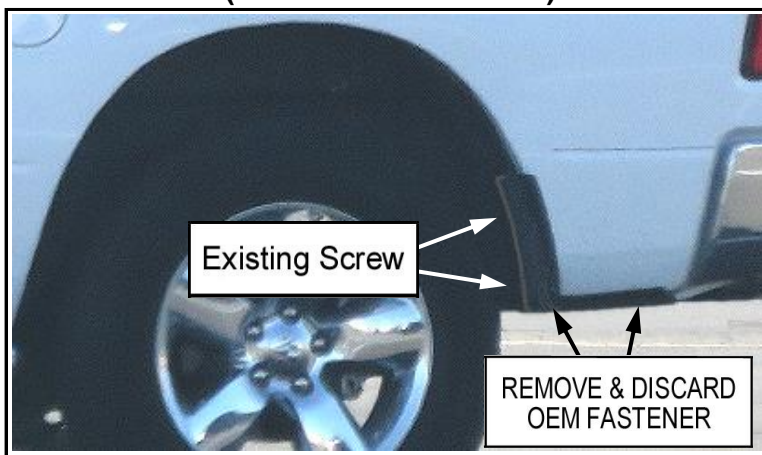


1. **For 2013-up models**, You need to remove the plastic factory wheel well piece from the lower rear of wheel well.
2. Remove two factory screws from inside of the wheel well.
3. Remove two factory fasteners from bottom side of the wheel well.

19. Installation (Left Rear Flare Shown)

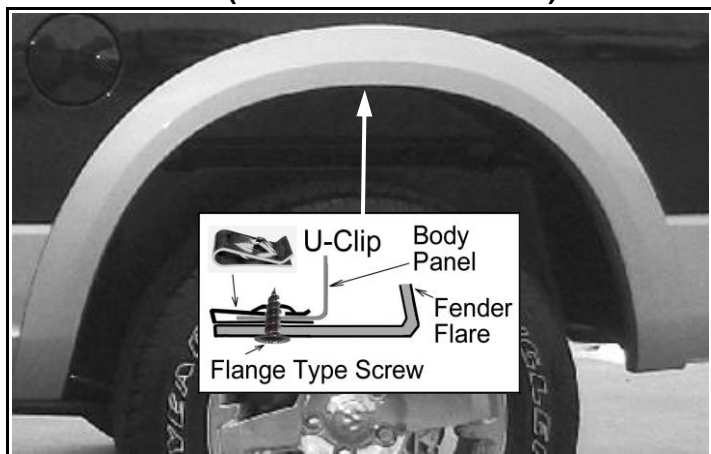

1. Apply one U-Clip and align the top factory hole.
2. Hold the flare in position on the vehicle, align with holes in flare. Adjust the clips in position if needed, secure 1 flange screw into the U-clip.

20. Installation (Left Rear Flare Shown)

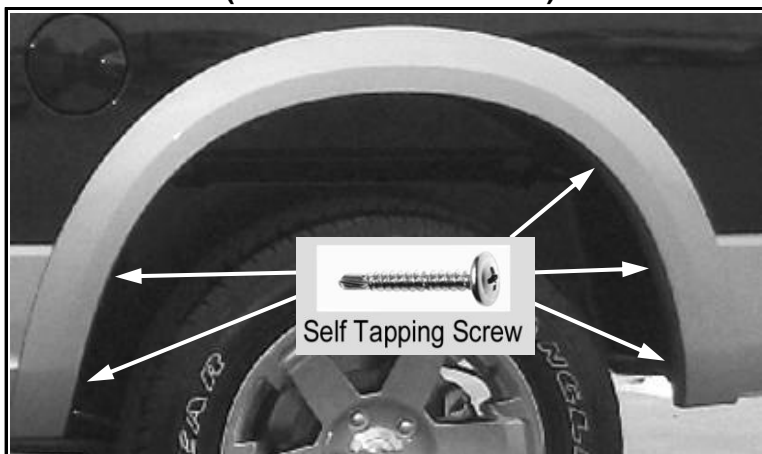

1. Install 5 supplied self tapping screws through flare into factory hole.
2. Press flare firmly and tighten all screws.

Optional : You can use the included self tapping screws to secure the flare if need be.

All rights reserved by Prime Selections, Inc. No part of this publication may be reproduced.

Prime Selections, Inc.· 5870 Ranchester Drive, Ste 650, Houston, TX 77036