

Make & Modle


FORD F-150 04-08 (ALSO STYLE SIDE/FLARE SIDE)

INSTALLATION INSTRUCTION

Item No. 801-0310

Rugged Shape Style

Parts Included

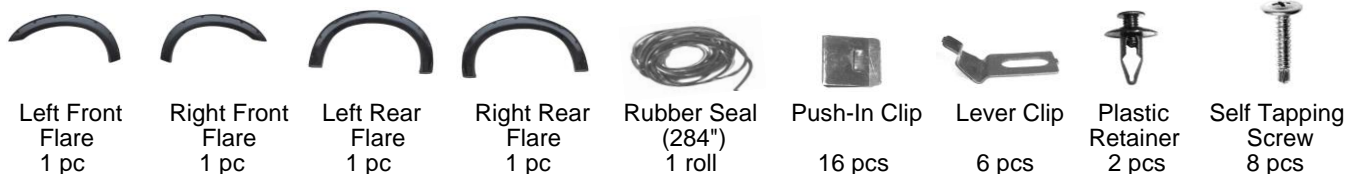

Caution: Always check the package, ensure the fitment of fender flare and follow the instruction carefully. PSI will not be responsible for painting & orther cost incurred to incorrect fender flares, failure of installation, shipping damage or modified flares.

1. Pre-Installation




1. Prefit and ensure both left (driver) side & right (passenger) side fender flare to the vehicle before painting or installation.
2. You may remove any moldings, strips or existing flares from the vehicle for fitting or installation. You can cut the fender flare to fit any body side molding also.

3. Clean Vehicle Body & Fender Flare




1. Wash and wipe dry the areas of contact on the vehicle body.
2. Clean the surface and inside edge of the fender flare where the rubber seal is to be attached.

2. Paint Flare(Optional)

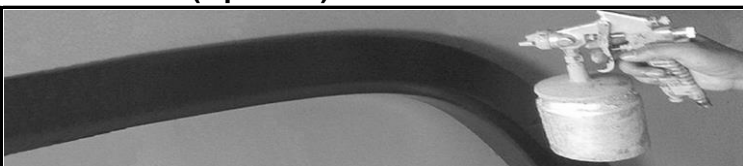


1. Hire a professional painter or body shop and follow the paint manufacturer speciifactions to paint the flares.
2. Clean all fender flares surfaces with clean water and a mild detergent before paint, do not use lacquer thinner or any solvent based products.

4. Apply Rubber Seal

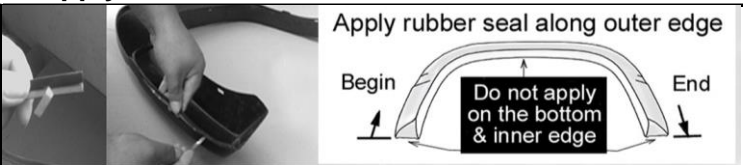

1. Remove about 1 inch tape liner from rubber seal and apply it on the flare, start one end and along the edge that comes in contact with body panel, apply pressure on the tape to ensure that it adheres well, trim excess rubber seal and so on.
2. To avoid bulge, you may cut a notch in the edge of rubber seal at the inward angle curve, cut a V out for the out ward angle curve.


5. Installation for All Style (Left Front Flare Shown)

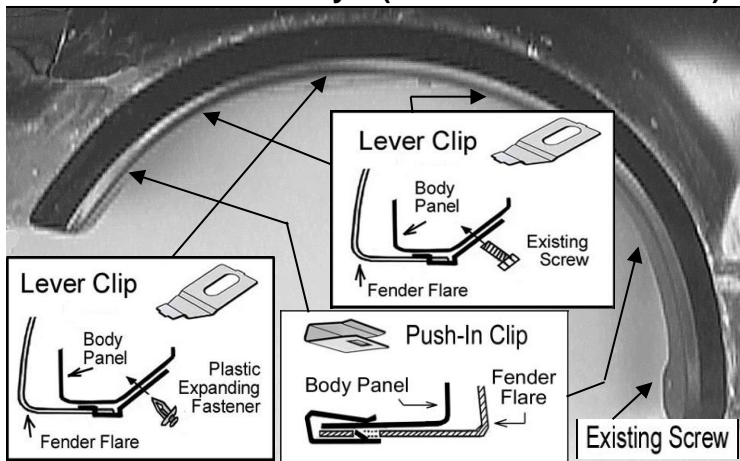

1. Remove 3 existing screws from the fasteners on the vehicle.
2. Place the flare on the vehicle with **best position**.
3. Apply 3 Lever Clips secure it to the hole with 2 existing screws and 1 expanding fastener (plastic retainer).
4. Apply 2 Push-In Clip into the mounting slot in flare and secure it.
5. Re-Install 1 existing factory screw into the original location that were previously removed. Do not tighten the screws fully until the flare are aligned and extrusive against the body. **(see illustration)**

Optional: Use the included self tapping screw to instead of the clip, clamp or any parts where it's not workable on the different condition of the fender or it may be used for extra secure when it be needed.

6. Installation for All Style (Left Rear Flare Shown)

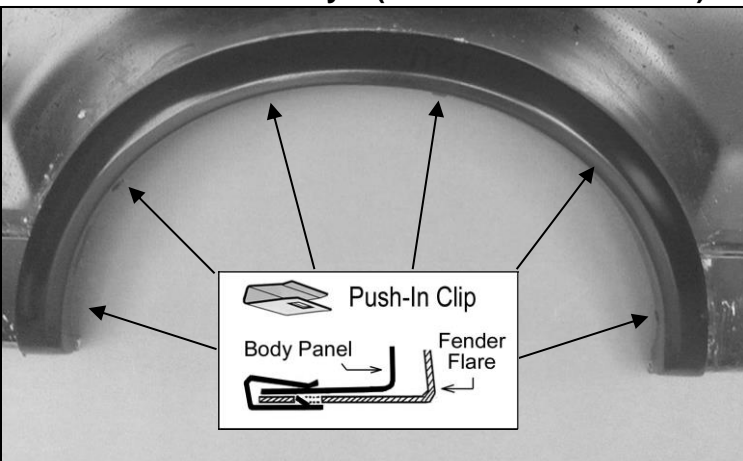

1. Place the flare on the vehicle with **best position**.
2. Apply 6 Push-In Clip into the mounting slot in flare and secure it to the vehicle. **(see illustration)**